

USER'S MANUAL KOYOT 2



KOYOT 2

Go ahead

WELCOME

We wish to welcome you to our team and thank you for the confidence that you have placed in a NIVIUK Glider.

We would like to share with you the commitment, the passion and emotions of the Niviuk design team, which have resulted in the creation of the new KOYOT 2. Niviuk are very proud of this new glider, a glider carefully designed to bring you maximum pleasure whilst allowing you learn and progress.

The KOYOT 2 offers confidence and comfort and with its ease of piloting, light, smooth, progressive and intuitive handling you will quickly experience the joys of ultimate free flight. A latest generation profile, competition technology and the highest quality materials to give you the answer that you expect. Progressive handling and total comfort places you the pilot in absolute control. You handle it, you control it and it goes where you want it to go.

We are confident that you will enjoy flying this wing and that you will soon understand the meaning of our slogan:

“The importance of small details”

This is the user's manual that we recommend you to read in detail.

The NIVIUK Gliders Team.

NIVIUK GLIDERS C/ DEL TER 6, NAVE D 17165 LA CELLERA DE TER - GIRONA - SPAIN

TEL. +34 972 42 28 78 FAX +34 972 42 00 86

info@niviuk.com www.niviuk.com

USER'S MANUAL

NIVIUK Gliders KOYOT 2


This manual offers all the necessary information that will familiarize you with the main characteristics of your new paraglider. Although this manual informs you about your glider, it does not offer the instruction requirements necessary for you to be able to pilot this type of wing. Flying instruction can only be taught at a paragliding school recognised by the Flying Federation of your country.

Nevertheless we remind you that it is important that you carefully read all the contents of the manual for your new KOYOT 2.

Severe injuries to the pilot can be the consequence of the misuse of this equipment.

SUMMARY

WELCOME	2	5. LOSING HEIGHT	10
USER'S MANUAL	2	5.1 SPLIT A	10
1. CHARACTERISTICS	4	5.2 B-LINE STALL	10
1.1 WHO IS IT DESIGNED FOR?	4	5.3 SPIRAL DIVE	11
1.2 CERTIFICATION	4	6. SPECIAL METHODS	11
1.3 IN-FLIGHT BEHAVIOUR	4	6.1 TOWING	11
1.4 ASSEMBLY, MATERIALS	5	6.2 ACROBATIC FLIGHT	11
1.5 ELEMENTS, COMPONENTS	5	7. FOLDING INSTRUCTIONS	12
2. UNPACKING AND ASSEMBLY	5	8. CARE AND MAINTENANCE	12
2.1 CHOOSE THE RIGHT PLACE	5	8.1 MAINTENANCE	12
2.2 PROCEDURE	6	8.2 STORAGE	12
2.3 ASSEMBLY OF THE HARNESS	6	8.3 CHECKS AND CONTROLS	12
2.4 TYPE OF HARNESS	6	8.4 REPAIRS	12
2.5 ASSEMBLY OF THE ACCELERATOR	6	9. SAFETY AND RESPONSIBILITY	12
2.6 INSPECTION AND WING INFLATION		10. GUARANTEE	13
ON THE GROUND	6	11. TECHNICAL DATA	14
2.7 ADJUSTING THE BRAKES	6	11.1 TECHNICAL DATA	14
3. THE FIRST FLIGHT	7	11.2 MATERIALS TECHNICAL DATA	15
3.1 CHOOSE THE RIGHT PLACE	7	11.3 RISER ARRANGEMENT	16
3.2 PREPARATION	7	11.4 LINE PLAN	17
3.3 FLIGHT PLAN	7	11.5 LENGTHS KOYOT 2 22	18
3.4 PRE-FLIGHT CHECK LIST	7	11.6 LENGTHS KOYOT 2 24	18
3.5 WING INFLATION, CONTROL, AND TAKE-OFF	7	11.7 LENGTHS KOYOT 2 26	19
3.6 LANDING	7	11.8 LENGTHS KOYOT 2 28	19
4. IN FLIGHT	7	11.9 LENGTHS KOYOT 2 31	20
4.1 FLYING IN TURBULENCE	7	11.10 CERTIFICATION	21
4.2 POSSIBLE CONFIGURATIONS	8		
4.3 USING THE ACCELERATOR	9		
4.4 FLYING WITHOUT BRAKE LINES	10		
4.5 KNOTS IN FLIGHT	10		

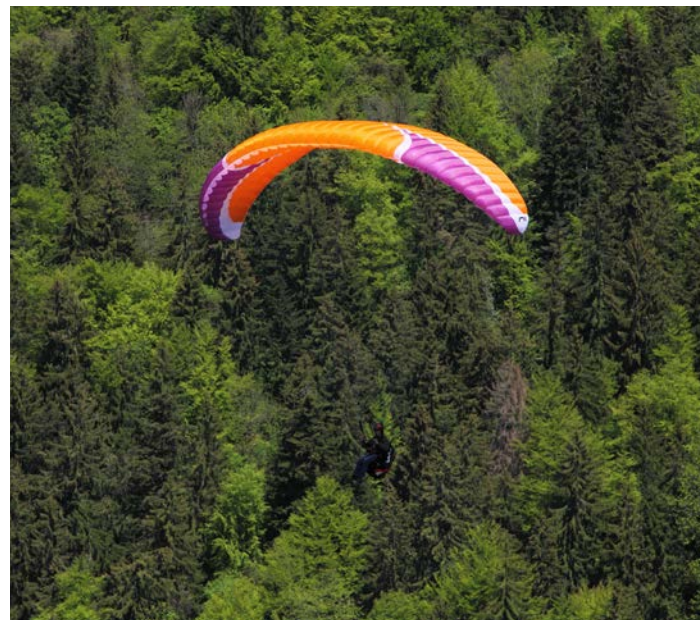

1. CHARACTERISTICS

1.1 WHO IS IT DESIGNED FOR?

For all those pilots wishing to start free flight on a glider with the top guarantees on every terrain.

Materials, certifications, performances, safety and a playful piloting, those are the bases of the development of the KOYOT 2.

The KOYOT 2 is extremely well suited to the very new pilot, the slightly more experienced pilot or even the very experienced pilot who wishes to fly with total relaxation. Many of the wings used in school are known as “basics” and usually they just cover the learning process. The KOYOT 2, unlike a classic beginner wing the KOYOT 2 is designed to take you far beyond the point of learning. From your very first flight to long distance adventures the KOYOT 2 is your wing for the future.

The KOYOT 2 offers confidence and comfort and with its ease of piloting, light, smooth, progressive and intuitive handling, you will quickly experience the joys of ultimate free flight.

The KOYOT 2 listens to you, understands you and is a natural progression of experience of flight.

1.2 CERTIFICATION

The KOYOT 2 has successfully achieved the European EN A certification.

Description of flight characteristics on A class:

Paraglider with maximum passive safety and extremely forgiving flying characteristics. Good resistance to departures from normal flight.

Description on pilots skills required on A class:

Designed for all pilots including pilots under all levels of training.

The KOYOT 2 passed the essential load test of 8G without experiencing any problems.

On the flight test all the five sizes of the KOYOT 2 received the best certification EN A.

This test was carried out in the Swiss Air-Turquoise laboratories.

Check the certification results and figures on the last pages of this manual or at www.niviuk.com

1.3 IN-FLIGHT BEHAVIOUR

In order to bring you the best glider in this class the NIVIUK Team have carried out extensive and meticulous design work. As a consequence of several prototypes and many hours of test flights numerous adjustments were made. These prototypes were then tested in all types of flight conditions. This intense development work supported by the combined experience of the whole team has achieved a wing with unbeatable behaviour. Light handling, precise response, manoeuvrable, safe and aesthetic, these are just some of the qualities of this wing.

The wing's behaviour on the ground is the first quality of its obedient temperament. Its lightness, in weight as in command is so decisive that all actions that are taken during the flight result in total liberty.

This wing's performance will make quite clear that lightness and efficiency are complementary concepts. Even in the most turbulent conditions all instructions are diligently transmitted and the response given by the KOYOT 2 is the expected response. The pilot will discover the manoeuvrability of this wing in all the aspects of piloting, allowing the pilot to explore beyond his/her present knowledge without running the risk of an incorrect response of the KOYOT 2.

The wing's safety is guaranteed by its excellent homologation certifications. It is worthwhile remembering that the best paraglider in the hands of a bad pilot does not guarantee a happy ending. The KOYOT 2's passive safety measures should also be accompanied by the passive safety offered by the rest of the flying equipment, the harness, helmet, emergency parachute etc. The extraordinary behaviour of the KOYOT 2 and common-sense piloting will give you many hours of peaceful flying.

1.4 ASSEMBLY, MATERIALS

The KOYOT 2 does not only introduce new design methods but also new manufacture technologies. Not a single millimetre of error is possible in the manufacturing process from Olivier's computer to the cutting of the fabric. An automatic process controlled by a laser-cutting program cuts each of the sections that compose the different parts of the wing. This program not only cuts the pieces of fabric but it also paints the guideline marks that will aid the assembly; it also numbers the separate pieces of material. All this is carried out before human handling of the pieces begins. So we eliminate possible and understandable errors that may occur during this delicate procedure.

The lines are semi-automatically manufactured and all the sewing is finished under the supervision of our specialists. The jigsaw puzzle of the assembly process is made easier using this method. We minimise the processes while making the quality control more efficient. All the different parts of the canopy are cut and assembled under the strict conditions induced by the automation of the whole process.

All NIVIUK Gliders go through an extremely thorough and efficient final inspection. Every single line of each glider is measured individually once the final assembly has concluded. Each wing is then individually inflated for the last visual revision.

Each glider is packaged following the maintenance and conservation instructions recommended for the advanced materials. NIVIUK Gliders

are made of first class materials as demanded by the performance, durability, and homologation requirements of the present-day market. Information about construction materials is given on the last pages of this manual.

1.5 ELEMENTS, COMPONENTS

The KOYOT 2 is delivered to its owner together with a series of components that, although not fundamental, do take an important part in the use, transport and storage of the paraglider. The glider is delivered together with a rucksack, large enough for all of the equipment to fit inside, once appropriately packed. The rucksack is designed to make transport on foot as pleasant as possible. The internal bag, intended to protect the KOYOT 2 from possible damage, during storage is also supplied.

The glider strap allows you to fold the wing as small as possible. Furthermore you will find the accelerator bar that completes the acceleration gear of the wing, a small fabric repair kit made of auto-adhesive ripstop, a user's manual with the answers all our questions about our new KOYOT 2, an instruction booklet and also a USB pen drive.

2. UNPACKING AND ASSEMBLY

2.1 CHOOSE THE RIGHT PLACE

We recommend that you unpack and assemble your wing on a schooling slope or a flat clear area without too much wind and free of obstacles. These conditions will allow you to carry out all the steps required for you to check and inflate the KOYOT 2.

We recommend that an instructor or a retailer supervises the entire procedure as only they are competent to resolve any doubt in a safe and professional way.

2.2 PROCEDURE

Take the paraglider out of the rucksack, open it and spread it open, with the lines on top of the underside, position the wing as if you were to inflate it. Check the condition of the fabric and the lines, make sure there are no abnormalities. Check the maillons that attach the lines to the risers are properly closed. Identify and order the A, B, C, and D lines, the brake lines and the corresponding risers. Make sure that there are no ties or knots.

2.3 ASSEMBLY OF THE HARNESS

Correctly place the risers on the harness karabiners. The risers and lines should not have any twists and they should be in the right order. Check that the harness buckles are correctly locked.

2.4 TYPE OF HARNESS

The KOYOT 2 has passed the EN A certification using a EN1651:1999 type harness. This certification allows it to be flown with most of the harnesses on the market. We recommend that you adjust the distance of the chest strap according the homologation.

This varies according to the size of the wing:
42 cm for size S, 44 cm for size M, 46 cm for size L.

Any change made to these specifications may affect the wing's performance and reactions. This would therefore effect the glider's configuration and would not conform to the homologation.

2.5 ASSEMBLY OF THE ACCELERATOR

The acceleration mechanism of the KOYOT 2 works when you push with your feet on the accelerator bar, this is supplied with the equipment. On delivery the accelerator bar has not yet been installed and it is recommended that it is fit by yourself before flight. Most harnesses are

equipped with a pre-installed acceleration system. When fitting any accelerator system ensure that all preinstalled items within the harness, such as roller pulleys are used correctly. After fitting, take into account that you will have to adjust the length of the accelerator lines for correct use. This will vary according to the length of the pilot's legs!

We recommend that you try the correct fitting of the acceleration system on equipment designed to do this, most paragliding schools have this sort of equipment.

2.6 INSPECTION AND WING INFLATION ON THE GROUND

Once you have checked all the equipment and made sure that the wind conditions are favourable, inflate your KOYOT 2 as many times as necessary in order to become acquainted with the wing's behaviour. The KOYOT 2 inflates easily and smoothly. An excess of energy is not necessary and the wing will inflate with minimum pressure on the harness when you move forward. This may be assisted by using the A lines. Do not pull on them, just assist the natural rising movement of the wing as it inflates and rises from the ground. This assistance is necessary because the KOYOT 2 cannot accumulate speed during this stage of the inflation. This action should be maintained until the wing is overhead. This is a characteristic of the wing which helps prevent the unpleasant situation of it flying ahead of you on the take off area.

2.7 ADJUSTING THE BRAKES

The length of the main brake lines is adjusted at the factory to the length established during homologation. However, the length can be changed to adapt to the pilot's flying style. Nevertheless, we recommend that you fly for a while with these, set at the original length. This will allow you to become accustomed to the KOYOT 2's original flying behaviour. If you then decide to change the length of the brake lines, untie the knot, slide the line through the brake link to the desired length, and strongly re-tie the knot. Qualified personnel should carry out this adjustment. You must

ensure that this adjustment does not slow down the glider without any pilot input. Both brake lines should be symmetrical and measure the same length. The most recommended knots are the clove hitch knot or bowline knot.

3. THE FIRST FLIGHT

3.1 CHOOSE THE RIGHT PLACE

We recommend that the first flight with your KOYOT 2 is made on a smooth slope (a school slope) or in your usual flying area accompanied by a qualified instructor.

3.2 PREPARATION

Repeat the procedures detailed in chapter 2 UNPACKING AND ASSEMBLY in order to prepare your equipment.

3.3 FLIGHT PLAN

Draw out a flight plan before take-off in order to avoid possible flight errors.

3.4 PRE-FLIGHT CHECK LIST

Once you are ready, but before you take-off, carry out another equipment inspection. Ensure correct installation of all equipment and that all lines are free of hindrances or knots. Check that the weather conditions are suited for your flying skills.

3.5 WING INFLATION, CONTROL, AND TAKE-OFF

Smoothly and progressively inflate the wing (chapter 2.6 INSPECTION AND WING INFLATION ON THE GROUND). The KOYOT 2 inflates easily

and does not require excessive energy. It does not tend to over-take you, so the wing inflation phase is carried out without anguish. These take off characteristics provide a perfect control phase and enough time for the pilot to decide whether to accelerate and take off.

Whenever the wind speed allows it, we recommend a reverse launch technique, this type of launch allows you to carry out a better visual check of the wing. The KOYOT 2 is especially easy to control in this position in strong winds. However, wind speeds up to 25 to 30 km/h are considered strong and extra consideration should be given to any thought of flight.

Preparation and positioning of the wing on the take off is especially important. Choose a location which is appropriate for the direction of the wind. Position the paraglider as if it were part of a large circle, taking into account the shape of the canopy in flight. All this will assist in a trouble free take-off.

3.6 LANDING

The KOYOT 2 lands excellently, it transforms the wing speed into lift on the pilot's demand, allowing an enormous margin of error. You will not have to wrap the brake lines around your hand to get greater braking efficiency.

4. IN FLIGHT

4.1 FLYING IN TURBULENCE

The KOYOT 2 complies with an excellent homologation to face this type of situation with the best safety guarantee. This wing is stable in all types of weather conditions. It reacts admirably in passive flight, thus offering a high level of safety in turbulent conditions. Nonetheless, all paragliders always have to be piloted according to the prevailing weather conditions, the pilot is the ultimate safety factor.

We recommend that the pilot adopts a proactive attitude when flying, making the necessary fine adjustments to keep the wing in control. He/she should stop braking to allow it to fly at the required wing speed after a correction is made. Do not maintain any correction for longer than necessary (braked) this would cause the wing to enter into critical flying situation. Whenever necessary, control a situation, react to it and then re-establish the required speed.

4.2 POSSIBLE CONFIGURATIONS

We recommend that training to master these manoeuvres be carried out under the supervision of a competent school.

Asymmetric collapse

In spite of the great stability of the profile of the KOYOT 2, heavy turbulent conditions may cause part of the wing to collapse asymmetrically. This usually happens when the pilot has not foreseen this possible reaction of the wing. When the wing is about to experience an asymmetric collapse the brake lines and the harness will transmit a loss of pressure to the pilot. To prevent the collapse from happening, pull the brake line corresponding to the compromised side of the wing, this will increase the angle of incidence. If the collapse does happen the KOYOT 2 will not react violently, the turn tendency is very gradual and it is easily controlled. Lean your body towards the side that is still flying in order to counteract the turn and to maintain a straight course, if necessary slightly slow down the same side. The collapse will normally open by itself but if that does not happen, pull completely on the brake line on the side which has collapsed (100%). Do this with a firm movement. You may have to repeat this operation to provoke the re-opening. Take care not to over-brake on the side that is still flying (turn control) and when the collapse has been solved, remember to let the wing recover its flying speed.

Symmetric collapse

In normal flying conditions the design of the KOYOT 2 ensures that a symmetric collapse is quite improbable. The profile of the wing has been

designed to widely tolerate extreme changes in the angle of incidence. A symmetric collapse may occur in heavy turbulent conditions, on entry or exit of strong thermals or lack of adapting the use of the accelerator to the prevailing air conditions. Symmetrical collapses usually re-inflate without the glider turning but you can symmetrically apply the brake lines with a quick deep pump to quicken the re-inflation. Release the brake lines immediately to recover optimum flight speed.

Negative spin

This configuration is out of the normal flight behaviour of the KOYOT 2. Certain circumstances however, may provoke this configuration such as trying to turn when the wing is flying at very low speed (while heavily braking). It is not easy to give any recommendations about this situation since it varies depending on the circumstances. Remember that you should restore the relative air speed over the wing. To achieve this, progressively reduce the pressure on the brake lines and let the wing gain speed. The normal reaction would be a lateral surge with a turn tendency no greater than 360° before restoring to normal flight conditions.

Parachutal stall

The possibility of this happening has been eliminated by the design of the KOYOT 2 and it is highly unlikely to happen on this paraglider. If it does happen, the feeling would be that the wing would not be advancing, you would feel a kind of instability and a lack of pressure on the brake lines, although the canopy would appear to be correctly inflated. The correct reaction would be to release the pressure on the brake lines and push the A lines forward or rather lean your body to any side **WITHOUT PULLING ON THE BRAKE LINES**.

Deep Stall

The possibility of the KOYOT 2 falling into this configuration is almost non-existent, if the factory settings have not been altered. This could happen if you are flying at a very low speed, whilst over steering in a number of manoeuvres and in turbulent conditions.

To provoke a deep stall you have to take the wing to minimum flight

speed by symmetrically pulling the brake lines, when you reach this point, continue pulling until you reach 100% and then hold. The glider will first fall behind you and then situate itself above you, rocking slightly, depending on how the manoeuvre was carried out. When you start to provoke a stall, be positive and do not doubt an instant. Do not release the brake lines when half way through the manoeuvre. This would cause the glider to surge violently forward with great energy and may result in the wing below the pilot. It is very important that the pressure on the brake lines is maintained until the wing is well established vertical above. To regain normal flight conditions, progressively and symmetrically release the brake lines, letting the speed be re-established. When the wing reaches the maximum advanced position ensure that the brakes are fully released. The wing will now surge forward, this is necessary so that air speed is completely restored over the wing. Do not over brake at this point because the wing needs to recover speed to quit the stall configuration. If you have to control a possible symmetrical front stall, briefly and symmetrically pull on the brake lines and let go even when the wing is still ahead of you.

Wing tangle

Of all the possible situations, which you may encounter while flying the KOYOT 2, this is the least probable one of all. The well proportioned ratio and well calculated positioning of the line cascades ratify this fact. A wing tangle may happen after an asymmetric collapse, the end of the wing is trapped between the lines (Cravat). This situation could rapidly cause the wing to turn, although it depends on the nature of the tangle. The correction manoeuvres are the same as those applied in the case of an asymmetrical collapse, control the turn tendency by applying the opposite brake and lean your body against the turn. Then locate the line that reaches the stabiliser that is trapped between the other lines. This line has a different colour and belongs to the external lines of the B riser. Pull on this line until it is tense, this should help to undo the wing tangle. If you cannot undo the tangle, fly to the nearest possible landing spot, control the flying course with your body movements and a little pressure on the opposite brake. Be careful when attempting to undo a tangle if

you are flying near a mountainside or near to other paragliders, you may lose control of the flying course and a collision may occur.

Over handling

Most flying incidents are caused by wrong actions of the pilot, which chained one after another create abnormal flying configurations (a cascade of incidents). You must remember that over handling the wing will lead to critical levels of functioning. The KOYOT 2 is designed always to try to recover normal flight by itself, do not try to over handle it. Generally speaking, the reactions of the wing, that follow over handling, are neither due to the input made or the intensity, but the length of time the pilot continues to over handle. You have to allow the profile to re-establish normal flight speed after any type of handling.

4.3 USING THE ACCELERATOR

The profile of the KOYOT 2 has been designed to fly stable through its entire speed range, the EN A certification confirms this. It is useful to accelerate when flying in strong winds or in extreme descending air. When you accelerate the wing, the profile becomes more sensitive to possible turbulence and closer to a possible frontal collapse. If you feel a pressure loss, you should stop pushing on the accelerator and pull slightly on the brake lines to increase the angle of incidence. Remember that you have to re-establish the flight speed after correcting the incidence.

It is NOT recommended to accelerate near to the mountainside or in very turbulent conditions. If necessary you will have to constantly adjust the movements and pressure on the accelerator whilst constantly adjusting the pressure applied to the brake lines. This balance is considered to be “active piloting.”

4.4 FLYING WITHOUT BRAKE LINES

If, for any reason at all, you cannot use the brake lines of your KOYOT 2 you will have to pilot the wing using the D-risers and your body weight to fly towards the nearest landing. The D-lines steer easily because they are not under pressure, however you have to be careful not to over handle them causing a stall or negative turn. To land you have to let the wing fly at full speed and before reaching the ground you will have to pull symmetrically on both the D-risers. This braking method is not as effective as using the brake lines so you will land at a higher speed.

4.5 KNOTS IN FLIGHT

The best way to avoid these knots and tangles is to inspect the lines before you inflate the wing for take-off. If you notice a knot before take off, immediately stop running and do not take-off.

If you have taken-off with a knot you will have to correct the drift by leaning on the opposite side of the knot and apply the brake line on that side too. You can gently pull on the brake line to see if the knot becomes unfastened or try to identify the line with the knot in it. The identified line can then be pulled to see if the knot undoes. Be very careful when trying to remove a knot. When there are knots in the lines or when they are tangled, do not pull too hard on the brake lines because there is a greater risk of the wing to stalling or negative turn being initiated.

Before trying to remove a knot, make sure there are no pilots flying nearby and never try these manoeuvres near the mountainside. If the knot is too tight and you cannot remove it, carefully and safely fly to the nearest landing place.

5. LOSING HEIGHT

The knowledge of the different descent techniques is an important resource to use in certain situations. The most adequate descent method will depend on the particular situation.

We recommend that you learn to use these manoeuvres under the tuition of a competent school.

5.1 SPLIT A

Big ears are a moderate descent method, reaching -3 or -4 m/s, ground speed reduces slightly between 3 and 5 km/h and piloting becomes limited. The angle of incidence and the surface wing load also increases. Push on the accelerator to restore the wing's horizontal speed and the angle of incidence.

The KOYOT 2 is fitted with a big ear pulley system which makes both locating the right line and the manoeuvre easier. These big ear pulleys can easily be removed whenever the pilot wishes. To activate big ears take either the big ear pulley or outer most line on each A risers and simultaneously, smoothly pull them outward and downward. The wingtips will fold in. Let go of the lines and the big ears will re-inflate automatically. If they do not re-inflate, gently pull on one of the brake lines and then on the opposite one. We recommend that you re-inflate asymmetrically, not to alter the angle of incidence, more so if you are flying near the ground or flying in turbulence.

5.2 B-LINE STALL

When you carry out this manoeuvre, the wing stops flying, it loses all horizontal speed and you are not in control of the paraglider. The air circulation over the profile is interrupted and the wing enters into a situation similar to parachuting.

To carry out this manoeuvre you have to take the B-lines below the maillons and symmetrically pull both of them down (approx. 20-30cms) and then hold this position. The initial phase is quite physical (hard resistance) which means that you will have to pull strongly until the profile of the wing is deformed, when this happens the required force will then significantly reduce. To maintain this manoeuvre you must continue to hold the B Lines in the pulled down position. The wing will then become deformed, horizontal speed drops to 0 km/h and vertical speed increases to -6 to -8 m/s depending on the conditions and how the manoeuvre has been carried out.

To exit the manoeuvre, simultaneously release both risers, the wing will then slightly surge forward and then automatically return to normal flight. It is better to let go of the lines quickly rather than slowly. This is an easy manoeuvre but you must remember that the wing stops flying, it loses all horizontal movement and its reactions are very different compared to normal flight.

5.3 SPIRAL DIVE

This is a more effective way for rapidly losing height. You have to know that, the wing can gain a lot of vertical speed and rotation speed (G force). This can cause a loss of orientation and consciousness (blackouts). These are the reasons why it is best to carry out this manoeuvre gradually so your capacity to resist the G forces increases and you will learn to fully appreciate and understand the manoeuvre. Always practice this manoeuvre when flying at high altitude.

To start the manoeuvre, first lean your bodyweight and pull the brake line to the side to which you are leaning. You can regulate the intensity of the turn by applying a little outside brake.

A paraglider flying at its maximum turn speed can reach -20 m/s, equivalent 70 km/h vertical speed and stabilize in a spiral dive from 15 m/s onwards.

These are the reasons why you should be familiar with and know how to carry out the exit methods.

To exit this manoeuvre you must progressively release the inside brake and also momentarily apply outside brake. Whilst doing this you must also lean your bodyweight towards the outside. This exit manoeuvre has to be carried out gradually and with smooth movements so you can feel the pressure and speed changes at the same time.

The after effect of the exit manoeuvre is that the glider will rock briefly with lateral surge, depending on how the manoeuvre has been carried out. Practice these movements at sufficient altitude and with moderation.

6. SPECIAL METHODS

6.1 TOWING

The KOYOT 2 does not experience any problem when being towed. Only qualified personnel should handle the qualified equipment to carry out this operation. The wing has to be inflated in the same way as in normal flight.

6.2 ACROBATIC FLIGHT

Although the KOYOT 2 has been tested by expert acrobatic pilots in extreme situations, it HAS NOT been designed for acrobatic flight and we DO NOT recommend continued use in this type of flight. Acrobatic flight is the youngest discipline in free flight. We consider acrobatic flight to be any form of piloting that is different to normal flight. To learn safely how to master acrobatic manoeuvres you should attend lessons which are carried out by a qualified instructor and over water. Extreme manoeuvres take you and your wing to centrifugal forces that can reach 4 to 5g. Materials will wear more quickly than in normal flight. If you do practice extreme manoeuvres we recommend that you submit your wing to a line revision every six months.

7. FOLDING INSTRUCTIONS

Historically packing a paraglider used to be a case of simply folding the wing in the easiest and most convenient way possible and then placing it into the backpack. However modern design and the introduction of technically advanced materials dictate that the folding of wings now requires more care and attention.

The KOYOT 2 features the SLE (Structured Leading Edge) and to preserve the integrity of this structure a degree of care should be taken when folding. When the correct technique is applied to the folding process it will ensure that the wing maintains its high performance, safety and durability. Folding should be carried out cell to cell (accordion style) with the SLE ribs remaining parallel to the leading edge at all times. The wing does not have to be tightly folded, if you do so it may damage the material and or the lines.

To assist in this folding process Niviuk has designed the NKare folding bag (supplied as an option). The NKare Bag will help to ensure the correct folding process is carried out, maintaining the profile and integrity of the internal SLE structure as described above.

8. CARE AND MAINTENANCE

8.1 MAINTENANCE

Careful maintenance of your equipment will ensure continued performance.

The fabric and the lines do not need to be washed, if they become dirty, clean them with a soft damp cloth. If your wing gets wet with salty water, immerse it in fresh water and dry it away from direct sunlight. The sunlight may damage the materials of your wing and cause premature aging. Once you have landed, do not leave the wing in the sun, store it properly. If you

use your wing in a sandy area, try to avoid the sand from entering through the cell openings of the leading edge. If sand is inside the wing, remove it before folding.

8.2 STORAGE

It is important that the wing is correctly folded when stored. Store your flying equipment in a cool, dry place away from solvents, fuels or oils. It is not advisable to store your flying equipment in the trunk of your car.

Temperatures inside a car parked in the sunlight, can be very high. Inside a rucksack and in the sunlight temperatures can reach 60°C. Weight should not be laid on top of the equipment.

8.3 CHECKS AND CONTROLS

You should ensure your KOYOT 2 is periodically serviced and checked at your local repair shop every 100 hours of use or once a year (whichever happens first). This is the only way to guarantee that your KOYOT 2 will continue to function properly and therefore continue fulfilling the homologation certificate results.

8.4 REPAIRS

If the wing is damaged, you can temporarily repair it by using the rip stop that you'll find in the repair kit, so long as no stitches are involved in the tear. Any other type of tear must be repaired in a specialized repair shop or by qualified personnel. Do not accept a home repair.

9. SAFETY AND RESPONSIBILITY

It is well known that paragliding is considered a high-risk sport, where safety depends on the person who is practising it.

Wrong use of this equipment can cause severe injuries to the pilot, even death. Manufacturers and dealers are not responsible for any act or accident that may be the result of practicing this sport.

You must not use this equipment if you are not trained. Do not take advice or accept any informal training from anyone who is not properly qualified as a flight instructor.

10. GUARANTEE

The entire equipment and components are covered by a 2 year guarantee for any manufacture fault.

The guarantee does not cover misuse or abnormal use of the materials.

11. TECHNICAL DATA


11.1 TECHNICAL DATA

KOYOT 2			22	24	26	28	31
CELLS	NUMBER		37	37	37	37	37
	CLOSED		4	4	4	4	4
	BOX		31	31	31	31	31
FLAT	AREA	M2	21,39	23,88	25,87	27,86	30,85
	SPAM	M	10,21	10,79	11,21	11,65	12,26
	ASPECT RATIO		4,87	4,87	4,86	4,87	4,87
PROJECTED	AREA	M2	18,18	20,54	22,25	23,96	26,53
	SPAM		8,06	8,52	9,08	9,20	9,68
	ASPECT RATIO		3,71	3,71	3,71	3,71	3,71
FLATTENING	%		15,00	15,00	15,00	15,00	15,00
CORD	MAXIMUM	M	2,54	2,68	2,79	2,89	3,04
	MINIMUM	M	0,59	0,63	0,65	0,67	0,71
	AVERAGE	M	2,10	2,21	2,31	2,39	2,52
LINES	TOTAL METERS	M	324	342	359	369	389
	HEIGHT	M	6,06	6,40	6,65	6,91	7,27
	NUMBER		244	244	244	244	244
	MAIN		3/4/3/3	3/4/3/3	3/4/3/3	3/4/3/3	3/4/3/3
RISERS	NUMBER	4	A/B/C/D	A/B/C/D	A/B/C/D	A/B/C/D	A/B/C/D
	TRIMS		NO	NO	NO	NO	NO
	ACCELERATOR	M/M	110	110	110	110	110
	SPLIT A's		YES	YES	YES	YES	YES
TOTAL WEIGHT	MINIMUM	KG	45	62	77	92	112
IN FLIGHT	MAXIMUM	KG	67	82	97	117	135
GLIDER WEIGHT		KG	4,90	5,20	5,40	5,60	6,00
CERTIFICATION	EN / LTF		A	A	A	A	A


11.2 MATERIALS TECHNICAL DATA

CANOPY	FABRIC CODE	SUPPLIER
UPPER SURFACE	SKYTEX 40 9017 E77	PORCHER IND (FRANCE)
BOTTOM SURFACE	N-20-DMF 36	DOMINICO TEX CO
PROFILES	3RS FM	DOMINICO TEX CO
DIAGONALS	3RS FM	DOMINICO TEX CO
LOOPS	LKI - 10	KOLON IND. (KOREA)
REINFORCEMENT LOOPS	W-420	D-P (GERMANY)
TRAILING EDGE REINFORCEMENT	MYLAR	D-P (GERMANY)
RIBS REINFORCEMENT	W-420	D-P (GERMANY)
THREAD	SERAFIL 60	AMAN (GERMANY)
SUSPENSION LINES		
SUSPENSION LINES	FABRIC CODE	SUPPLIER
UPPER CASCADES	TNL - 080	TEIJIM LIMITED (JAPAN)
MIDDLE CASCADES	TNL - 081	TEIJIM LIMITED (JAPAN)
MIDDLE CASCADES	TNL - 140	TEIJIM LIMITED (JAPAN)
MAIN	TNL - 140	TEIJIM LIMITED (JAPAN)
MAIN	TNL - 220	TEIJIM LIMITED (JAPAN)
MAIN	TNL - 280	TEIJIM LIMITED (JAPAN)
MAIN BREAK	TNL - 400	TEIJIM LIMITED (JAPAN)
THREAD	SERAFIL 60	AMAN (GERMANY)
RISERS		
RISERS	FABRIC CODE	SUPPLIER
MATERIAL	G-R 25	TECNI SANGLES (FRANCE)
COLOR INDICATOR	PAD	TECNI SANGLES (FRANCE)
THREAD	V138	COATS (ENGLAND)
MAILLONS	MRI4	ANSUNG PRECISION (KOREA)
PULLEYS	PY - 1304-2	ANSUNG PRECISION (KOREA)

11.3 RISER ARRANGEMENT

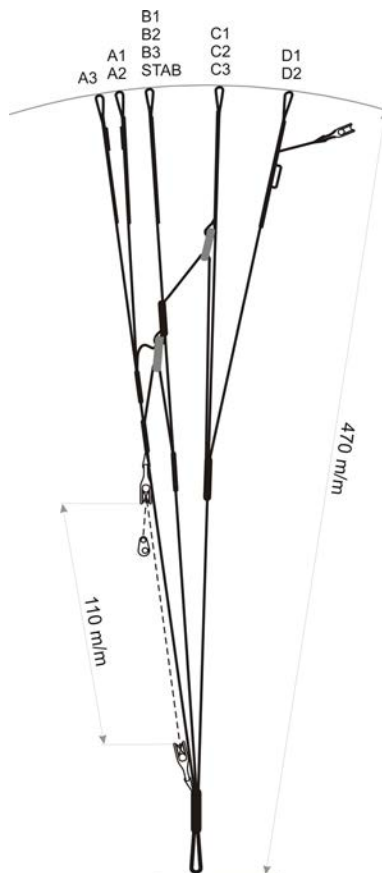

11.4 LINE PLAN

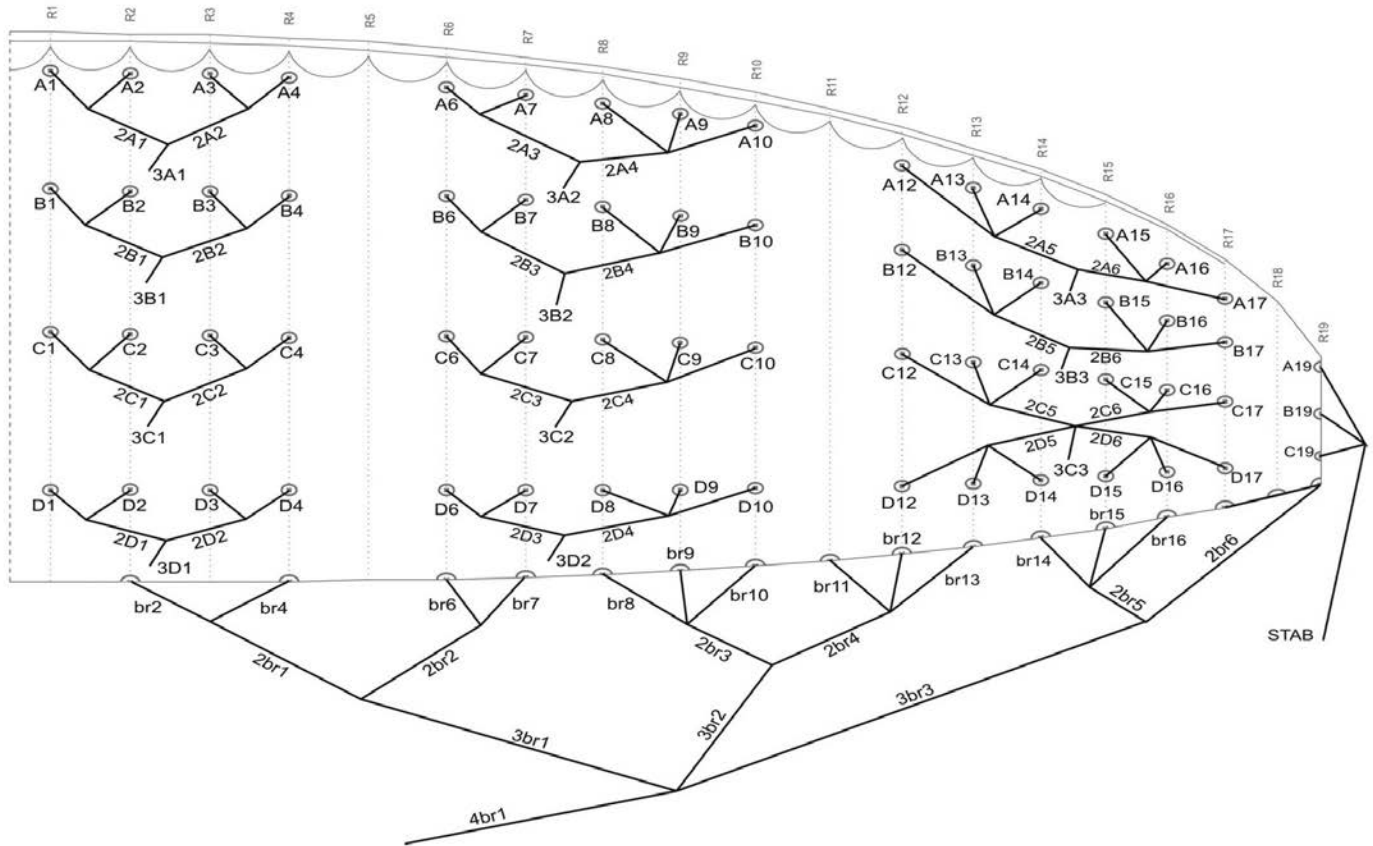

11.5 LENGTHS KOYOT 2 22

NIVIUK KOYOT 2 22					
LINES HEIGHT M/M					
	A	B	C	D	BR
1	5.980	5.905	5.940	6.055	6.805
2	5.940	5.865	5.885	5.985	6.550
3	5.925	5.845	5.870	5.975	6.345
4	5.945	5.865	5.905	6.020	6.320
5	5.920	5.855	5.895	6.025	6.270
6	5.880	5.815	5.835	5.945	6.165
7	5.855	5.790	5.810	5.910	6.160
8	5.850	5.790	5.815	5.920	6.150
9	5.880	5.825	5.870	5.995	6.160
10	5.830	5.790	5.820	5.915	6.235
11	5.775	5.745	5.765	5.850	6.120
12	5.745	5.715	5.740	5.830	6.050
13	5.695	5.675	5.700	5.780	6.050
14	5.650	5.635	5.665	5.725	6.095
15	5.620	5.605	5.635	5.715	
STB	5.370	5.355	5.380		

RISERS LENGHT M/M					
	A	B	C	D	
	470	470	470	470	STANDARD
	365	390	430	470	ACCELERATED

11.6 LENGTHS KOYOT 2 24

NIVIUK KOYOT 2 24					
LINES HEIGHT M/M					
	A	B	C	D	BR
1	6.325	6.250	6.285	6.420	7.185
2	6.285	6.205	6.225	6.350	6.905
3	6.265	6.195	6.215	6.335	6.695
4	6.295	6.215	6.250	6.385	6.670
5	6.280	6.200	6.235	6.385	6.610
6	6.230	6.160	6.185	6.305	6.500
7	6.205	6.135	6.155	6.265	6.495
8	6.200	6.135	6.160	6.265	6.485
9	6.235	6.170	6.215	6.355	6.490
10	6.175	6.130	6.170	6.265	6.575
11	6.115	6.085	6.110	6.195	6.460
12	6.085	6.055	6.085	6.185	6.385
13	6.035	6.010	6.040	6.120	6.385
14	5.985	5.970	6.000	6.070	6.350
15	5.955	5.940	5.980	6.060	
STB	5.685	5.675	5.695		

RISERS LENGHT M/M					
	A	B	C	D	
	470	470	470	470	STANDARD
	360	380	420	470	ACCELERATED

11.7 LENGTHS KOYOT 2 26

NIVIUK KOYOT 2 26					
LINES HEIGHT M/M					
	A	B	C	D	BR
1	6.585	6.505	6.540	6.670	7.550
2	6.535	6.455	6.480	6.600	7.255
3	6.525	6.445	6.465	6.585	7.025
4	6.545	6.470	6.500	6.635	7.000
5	6.535	6.455	6.495	6.645	6.935
6	6.485	6.410	6.435	6.555	6.825
7	6.460	6.390	6.415	6.525	6.810
8	6.455	6.385	6.420	6.535	6.810
9	6.485	6.425	6.480	6.635	6.820
10	6.430	6.380	6.420	6.520	6.905
11	6.375	6.335	6.360	6.450	6.780
12	6.340	6.300	6.330	6.435	6.705
13	6.290	6.260	6.285	6.370	6.695
14	6.240	6.220	6.245	6.320	6.625
15	6.210	6.190	6.225	6.305	
STB	5.915	5.905	5.995		

RISERS LENGHT M/M				
A	B	C	D	
470	470	470	470	STANDARD
360	380	420	470	ACCELERATED

11.8 LENGTHS KOYOT 2 28

NIVIUK KOYOT 2 28					
LINES HEIGHT M/M					
	A	B	C	D	BR
1	6.840	6.755	6.800	6.920	7.745
2	6.795	6.705	6.730	6.855	7.440
3	6.780	6.695	6.725	6.840	7.195
4	6.805	6.720	6.760	6.890	7.175
5	6.780	6.695	6.740	6.895	7.125
6	6.730	6.655	6.685	6.805	7.000
7	6.705	6.635	6.655	6.765	6.990
8	6.695	6.630	6.660	6.775	6.985
9	6.735	6.670	6.720	6.870	7.000
10	6.670	6.630	6.665	6.775	7.090
11	6.610	6.575	6.605	6.700	6.955
12	6.580	6.545	6.570	6.685	6.875
13	6.520	6.500	6.525	6.615	6.870
14	6.470	6.455	6.480	6.565	6.820
15	6.435	6.420	6.455	6.545	
STB	6.145	6.125	6.145		

RISERS LENGHT M/M				
A	B	C	D	
470	470	470	470	STANDARD
360	380	420	470	ACCELERATED

11.9 LENGTHS KOYOT 2 31

NIVIUK KOYOT 2 31					
LINES HEIGHT M/M					
	A	B	C	D	BR
1	7.190	7.095	7.140	7.285	8.160
2	7.140	7.040	7.075	7.205	7.835
3	7.125	7.030	7.065	7.185	7.590
4	7.150	7.060	7.105	7.245	7.555
5	7.130	7.045	7.090	7.245	7.495
6	7.075	7.000	7.025	7.150	7.370
7	7.050	6.970	6.995	7.110	7.365
8	7.040	6.970	7.005	7.115	7.355
9	7.075	7.015	7.065	7.220	7.365
10	7.010	6.965	7.005	7.115	7.455
11	6.945	6.915	6.940	7.035	7.320
12	6.910	6.875	6.905	7.020	7.240
13	6.850	6.825	6.860	6.950	7.235
14	6.795	6.780	6.815	6.895	7.240
15	6.755	6.745	6.785	6.880	
STB	6.465	6.435	6.445		
RISERS LENGHT M/M					
	A	B	C	D	
	470	470	470	470	STANDARD
	360	380	420	470	ACCELERATED

11.10 CERTIFICATION

para-test.com



paragliding by air turquoise

Air Turquoise SA
Rte du Pré-au-Comte 8 | CH-1804 Villeneuve
tel. +41 21 965 65 65 | mobile +41 79 202 52 30
info@para-test.com

AIR TURQUOISE SA certified by



Class: **A**

In accordance with EN standards 926-2:2005 & 926-1:2006: **PG_0522.2012**

Date of issue (DMY): **23. 05. 2012**

Manufacturer: **Niviuk Gliders / Air Games S.L.**

Model: **Koyot 2 22**

Serial number:

Configuration during flight tests

Paraglider		Accessories	
Maximum weight in flight (kg)	67	Range of speed system (cm)	10
Minimum weight in flight (kg)	45	Speed range using brakes (km/h)	13
Glider's weight (kg)	5.05	Range of trimmers (cm)	0
Number of risers	4	Total speed range with accessories (km/h)	20
Projected area (m ²)	18.31		

Harness used for testing (max weight)

Harness type	ABS	Inspections (whichever happens first)
Harness brand <td>Sup'Air</td> <td>every 24 months or every 100 flying hours</td>	Sup'Air	every 24 months or every 100 flying hours
Harness model <td>Access S</td> <td>Warning! Before use refer to user's manual</td>	Access S	Warning! Before use refer to user's manual
		Person or company having presented the glider for testing: Nef Olivier
Harness to risers distance (cm)	49	
Distance between risers (cm)	42	

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
 A 0

para-test.com



paragliding by air turquoise

Air Turquoise SA
Rte du Pré-au-Comte 8 | CH-1804 Villeneuve
tel. +41 21 965 65 65 | mobile +41 79 202 52 30
info@para-test.com

AIR TURQUOISE SA certified by



Class: **A**

In accordance with EN standards 926-2:2005 & 926-1:2006: **PG_0523.2012**

Date of issue (DMY): **23. 05. 2012**

Manufacturer: **Niviuk Gliders / Air Games S.L.**

Model: **Koyot 2 24**

Serial number:

Configuration during flight tests

Paraglider		Accessories	
Maximum weight in flight (kg)	82	Range of speed system (cm)	10
Minimum weight in flight (kg)	62	Speed range using brakes (km/h)	13
Glider's weight (kg)	5.3	Range of trimmers (cm)	0
Number of risers	4	Total speed range with accessories (km/h)	20
Projected area (m ²)	20.41		

Harness used for testing (max weight)

Harness type	ABS	Inspections (whichever happens first)
Harness brand <td>Advance</td> <td>every 24 months or every 100 flying hours</td>	Advance	every 24 months or every 100 flying hours
Harness model <td>Progress Light</td> <td>Warning! Before use refer to user's manual</td>	Progress Light	Warning! Before use refer to user's manual
		Person or company having presented the glider for testing: Nef Olivier
Harness to risers distance (cm)	49	
Distance between risers (cm)	46	

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
 A 0



AIR TURQUOISE SA certified by



Class: **A**

In accordance with EN standards 926-2:2005 & 926-1:2006: **PG_0524.2012**

Date of issue (DMY): **23. 05. 2012**

Manufacturer: **Niviuk Gliders / Air Games S.L.**

Model: **Koyot 2 26**

Serial number:

Configuration during flight tests

Paraglider		Accessories	
Maximum weight in flight (kg)	97	Range of speed system (cm)	10
Minimum weight in flight (kg)	77	Speed range using brakes (km/h)	13
Glider's weight (kg)	5.6	Range of trimmers (cm)	0
Number of risers	4	Total speed range with accessories (km/h)	20
Projected area (m2)	22.58		

Harness used for testing (max weight)

Harness type	ABS
Harness brand	Niviuk Gliders
Harness model	Hamak M
Harness to risers distance (cm)	49
Distance between risers (cm)	46

Inspections (whichever happens first)

every 24 months or every 100 flying hours
Warning! Before use refer to user's manual
Person or company having presented the glider for testing: **Nef Olivier**

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
A 0



AIR TURQUOISE SA certified by



Class: **A**

In accordance with EN standards 926-2:2005 & 926-1:2006: **PG_0525.2012**

Date of issue (DMY): **23. 05. 2012**

Manufacturer: **Niviuk Gliders / Air Games S.L.**

Model: **Koyot 2 28**

Serial number:

Configuration during flight tests

Paraglider		Accessories	
Maximum weight in flight (kg)	117	Range of speed system (cm)	10
Minimum weight in flight (kg)	92	Speed range using brakes (km/h)	13
Glider's weight (kg)	5.9	Range of trimmers (cm)	0
Number of risers	4	Total speed range with accessories (km/h)	20
Projected area (m2)	23.76		

Harness used for testing (max weight)

Harness type	ABS
Harness brand	Sol Paragliders
Harness model	Slider L
Harness to risers distance (cm)	49
Distance between risers (cm)	46

Inspections (whichever happens first)

every 24 months or every 100 flying hours
Warning! Before use refer to user's manual
Person or company having presented the glider for testing: **Nef Olivier**

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
A 0



AIR TURQUOISE SA certified by



Class: **A**

In accordance with EN standards 926-2:2005 & 926-1:2006: **PG_0526.2012**

Date of issue (DMY): **23. 05. 2012**

Manufacturer: **Niviuk Gliders / Air Games S.L.**

Model: **Koyot 2 31**

Serial number:

Configuration during flight tests

Paraglider

Maximum weight in flight (kg)	135
Minimum weight in flight (kg)	112
Glider's weight (kg)	6.3
Number of risers	4
Projected area (m ²)	26.27

Accessories

Range of speed system (cm)	10
Speed range using brakes (km/h)	13
Range of trimmers (cm)	0
Total speed range with accessories (km/h)	20

Harness used for testing (max weight)

Harness type	ABS
Harness brand	Advance
Harness model	Progress L
Harness to risers distance (cm)	49
Distance between risers (cm)	46

Inspections (whichever happens first)

every 24 months or every 100 flying hours	
Warning! Before use refer to user's manual	
Person or company having presented the glider for testing: Nef Olivier	

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
A 0

